

Maidenhead & District Talking Newspaper Association

USB Thumb Drive

Guard

Play / Pause

USB socket


Reset to Track 1

Blue = player switched on
Red = battery charging

LED

Next Track

Previous Track

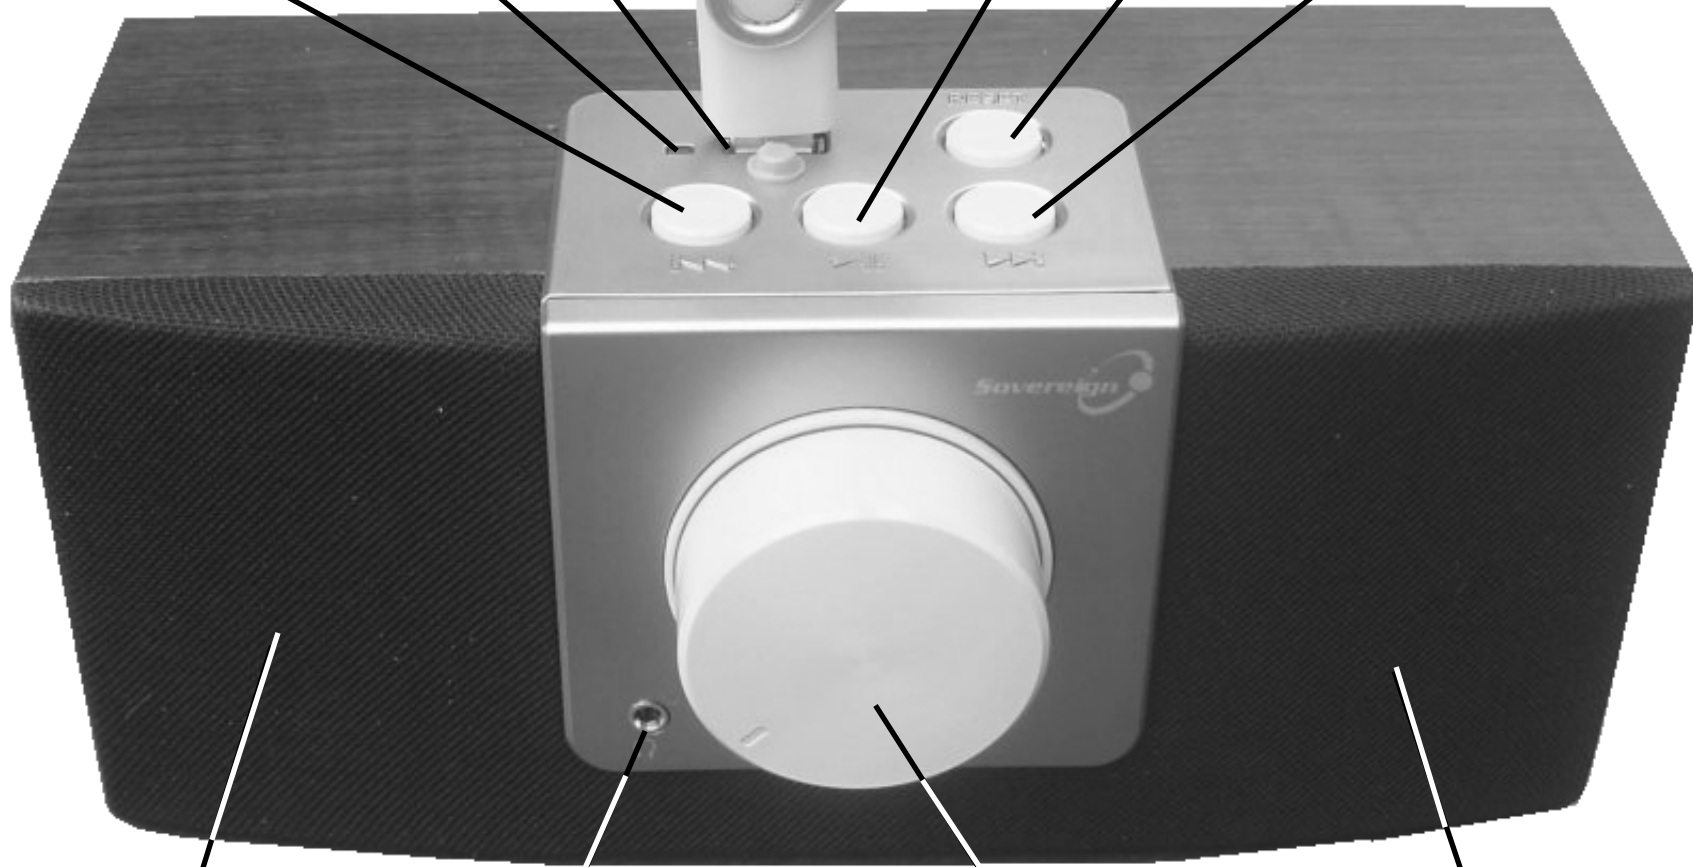

Loudspeaker

Headphone jack

Off-On-Volume

Loudspeaker

For start of current track press Previous Track then Next Track